


GENERAL INSTALLATION INSTRUCTIONS

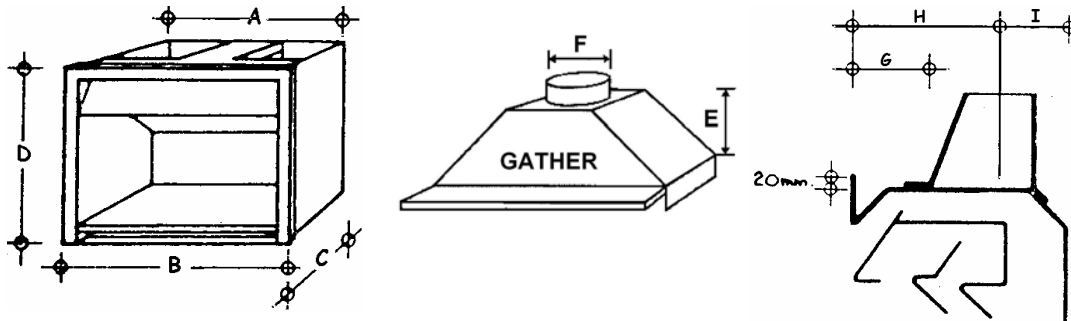


MODEL	DIMENSIONS IN MILLIMETERS								
	A	B	C	D	E	F	G	H	I
400	390	440	340	570	200	200	110	195	145
440	470	510	330	610	200	200	80	190	140
500	570	600	350	650	200	200	90	230	120
600	670	700	350	650	200	200	90	230	120
600L	670	700	350	600	200	200	90	230	120
700S	770	800	350	650	200	200	90	230	120
700SL	770	800	350	600	200	200	90	230	120
700D	770	800	400	700	200	225	100	250	150
850	920	950	450	750	220	250	130	300	150
850LOW	920	950	450	700	220	250	130	300	150
1050	1120	1150	500	800	240	300	150	320	180
1200 *	1250	1300	600	980	400	250	300	450	150
1500 *	1550	1600	600	980	400	300	350	450	150

*REQUIRES 2 FLUE OUTLETS

BENDS STAINLESS STEEL			
	A	B	C
200mm	150	390	170
225mm	150	420	170
250mm	180	450	200
300mm	190	460	200
350mm	160	430	200

BENDS GALVANISED			
	A	B	C
250mm	180	460	190
275mm	150	450	190
300mm	180	460	190
350mm	200	520	225
400mm	260	600	225

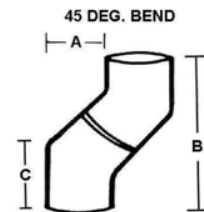

ASSEMBLY AND INSTRUCTION

- POSITION UNIT ON FINISHED HEARTH LEVEL – ENSURE AIR INTAKE AT BASE OF UNIT IS NOT OBSTRUCTED:
- BOLT GATHER TO UNIT:
- INSULATE ENTIRE UNIT AND GATHER WHERE PAINTED RED:
- BOLT LINTEL (OPTIONAL) TO UNIT – INSULATE BETWEEN UNIT AND LINTEL:
- RIVET INNER FLUE TO COLLAR OF GATHER AT THREE PLACES:
- RIVET ALL FURTHER INNER FLUES AT THREE PLACES:
- IF USING DOUBLE SKIN FLUES SPACE INNER AND OUTER FLUES USING 3 X 25mm SELF TAPPING SCREWS THROUGH OUTER CASING AT TOP AND BOTTOM, AND WHEN USING A COVER CONE DRILL A SERIES OF HOLES INTO THE OUTER FLUE BELOW THE COVER CONE TO ENSURE ADEQUATE VENTILATION:
- FIT COWL TO FLUE OR CHIMNEY BREAST.

RECOMMENDATIONS

- DO NOT RECESS UNIT BY MORE THAN 110mm
- USE A MINIMUM OF 3.6 METER LENGTH OF FLUE.

**JETMASTER INSTALLATION
SPECIFICATION SHEET 10**